

# SINAMICS S120 drive system

## Supplementary system components

### BOP20 Basic Operator Panel

#### Overview



BOP20 Basic Operator Panel

The BOP20 Basic Operator Panel can be snapped onto any CU310 or CU320-2 Control Unit and may be used to acknowledge faults, set parameters and read diagnostic information (e.g. alarm and fault messages).

#### Design

The BOP20 Basic Operator Panel has a backlit two-line display area and 6 keys.

The integrated plug connector on the back of the BOP20 Basic Operator Panel provides the power to the BOP20 Basic Operator Panel and the communication with the CU310 or CU320-2 Control Unit.

#### Integration



CU310 DP Control Unit with attached BOP20 Basic Operator Panel



CU320-2 DP Control Unit with attached BOP20 Basic Operator Panel

#### Selection and ordering data

Description	Order No.
<b>BOP20 Basic Operator Panel</b>	<b>6SL3055-0AA00-4BA0</b>