Inductive sensor
NI5-EM12-Y1X-H1141

TURCK

Industrial
Automation

- ● **ATEX category II 1 G, Ex zone 0**
- ● **ATEX category II 1 D, Ex zone 20**
- ● **SIL2 as per IEC 61508**
- ● **threaded barrel, M12 x 1**
- ● **stainless steel, 1.4301**
- ● **2-wire DC, nom. 8.2 VDC**
- ● **output according to DIN EN 60947-5-6 (NAMUR)**
- ● **connector M12 x 1**

Wiring diagram
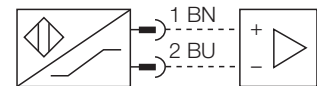
Functional principle
Inductive sensors detect metal objects contactless and wear-free. For this purpose they use a high-frequency electromagnetic AC field that interacts with the target. The sensors hosting a ferrite core coil generate the AC field through an LC resonant circuit.
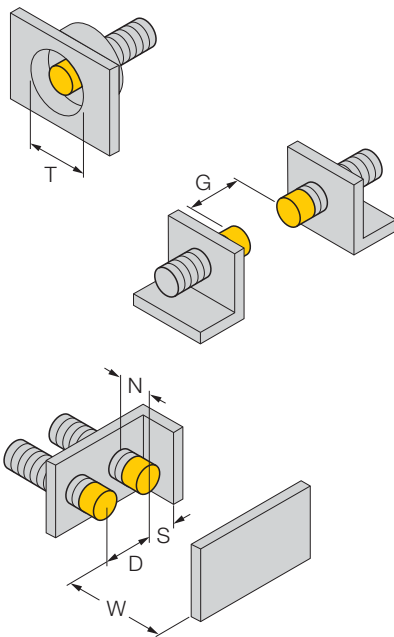
Type	NI5-EM12-Y1X-H1141
Ident-No.	4010301
Rated operating distance Sn	5 mm
Mounting condition	non-flush
Assured sensing range	$\leq$ (0,81 x Sn) mm
Correction factors	St37 = 1, V2A ~ 0.7, Ms ~ 0.4, Al ~ 0.3
Repeatability	$\leq$ 2 %
Temperature drift	$\leq \pm$ 10 %
Hysteresis	1… 10 %
Ambient temperature	-25…+ 70℃
Output function	2-wire, NAMUR
Switching frequency	$\leq$ 2kHz
voltage	Nom. 8.2 VDC
Non-actuated current consumption	$\geq$ 2.1 mA
Actuated current consumption	$\leq$ 1.2 mA
Approval acc. to	KEMA 02 ATEX 1090X Issue no.4
Internal inductance (L_i) / capacitance (C_i)	150 nF / 150 µH
Device designation	⟨Ex⟩ II 1 G Ex ia IIC T6/II 1 D Ex ia D 20 T115 ℃
	(max. U_i = 20 V, I_i = 20 mA, P_i = 200 mW)
Housing	threaded barrel, M12 x 1
Dimensions	52mm
Housing material	Metal, V2A (1.4301)
Material active face	Plastic, PA12-GF30
Tightening torque of housing nut	10 Nm
Electrical connection	Connectors, M12 x 1
Vibration resistance	55 Hz (1 mm)
Shock resistance	30g (11 ms)
Protection class	IP67
Switching state	LED yellow

Inductive sensor
NI5-EM12-Y1X-H1141

Mounting instructions	minimum distances
Distance D	3 x B
Distance W	3 x Sn
Distance T	3 x B
Distance S	1.5 x B
Distance G	6 x Sn
Distance N	2 x Sn

Diameter of the active area B	Ø 12 mm

Hans Turck GmbH & Co.KG • D-45472 Mülheim an der Ruhr • Witzlebenstraße 7 • Tel. 0208 4952-0 • Fax 0208 4952-264 • more@turck.com • www.turck.com

2/4
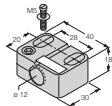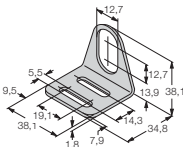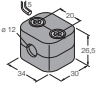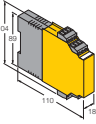
Accessories

Type code	Ident-No.	Short text	Dimension drawing
BST-12B	6947212	Fixing clamp with dead-stop; material: PA6	
MW-12	6945003	Mounting bracket; material: Stainless steel A2 1.4301 (AISI 304)	
BSS-12	6901321	Fixing clamp; material: Polypropylene	
IM1-22EX-R	7541231	Isolating switching amplifier, 2-port; 2 transistor outputs; input for NAMUR signals; selectable ON/OFF mode for wire-break and short-circuit monitoring; adjustable signal flow (NO/ NCmode); removable terminal blocks; 18 mm width; universal voltage supply unit	

Hans Turck GmbH & Co.KG • D-45472 Mülheim an der Ruhr • Witzlebenstraße 7 • Tel. 0208 4952-0 • Fax 0208 4952-264 • more@turck.com • www.turck.com

3/4

• Edition: • 29.10.2010

Inductive sensor
NI5-EM12-Y1X-H1141

Operating manual

Intended use
This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2006, -11:2007, -26:2004 and EN61241-0:2006, -11:2006. Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508. In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification
II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

Marking (see device or technical data sheet)
⟨Ex⟩ II 1 G and Ex ia IIC T6 as per EN60079-11 and -26 and ⟨Ex⟩ II 1 D Ex iaD 20 T 115°C as per EN60079-11 and EN61241-0 and -11

Local admissible ambient temperature
-25…+70 °C

Installation / Commissioning
These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas. Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-11 and EN61241-11.   Please observe the maximum admissible electrical values. After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14). When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

Installation and mounting instructions
Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

service / maintenance
Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.